


SIBIR



V-ZUG-Home

Install the app, network your appliances and benefit from a wide range of useful functions.

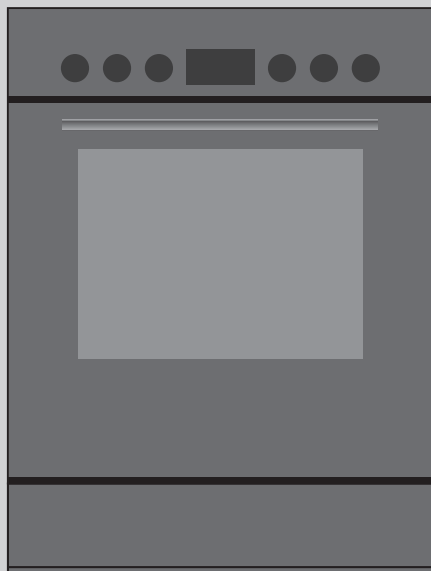

Operating instructions

EB Tritherm V600 | EH Tritherm 4 V600

Oven | Cooker

Thank you for choosing to buy one of our products. Your appliance is made to high standards and is easy to use. Nevertheless, please take the time to read these operating instructions in order to familiarize yourself with the appliance and get the best use out of it.

Please follow the safety precautions.

Modifications

Text, diagrams and data correspond to the technical standard of the appliance at the time these operating instructions went to press. The right to make technical modifications for the purpose of the further development of the appliances is reserved.

Validity

These operating instructions apply to:

Model designation	Model number	Type	Size system
EB Tritherm V600 2024/60	21127	C6H-21127	60-600
EB Tritherm V600 2024	21133	C6H-21133	55-762
EH Tritherm 4 V600 2024/60	22031	CH6H-22031	60-600
EH Tritherm 4 V600 2024	22034	CH6H-22034	55-762

Variations depending on the model are noted in the text.



Download updates to your appliance via V-ZUG-Home so that you are always up to date. The latest operating instructions with the new functions incorporated can be found here: vzug.com.

Contents

1	Safety precautions	5	6.10	Top/Bottom heat	21
1.1	Symbols used	5	7	V-ZUG-Home	22
1.2	General safety precautions	5	7.1	Conditions	22
1.3	Appliance-specific safety precautions	5	7.2	Initial set-up	22
1.4	Instructions for use	7	7.3	Updating the appliance.....	23
2	Using for the first time	9	8	User settings	23
3	Appliance description	9	8.1	Overview of settings	23
3.1	Construction.....	9	8.2	Adjusting user settings	23
3.2	Cooking space	10	8.3	Time.....	23
3.3	Operating and display elements	10	8.4	Time display.....	24
3.4	Accessories.....	11	8.5	Childproof lock	24
4	Operating the appliance	11	8.6	Acoustic signal	24
4.1	Switching the appliance on.....	11	8.7	V-ZUG-Home	24
4.2	Selecting the operating mode and the cooking space temperature.....	11	8.8	Resetting V-ZUG-Home.....	25
4.3	Display lock.....	12	8.9	Factory settings	25
4.4	Switching the appliance off.....	12	8.10	Demo mode.....	25
4.5	Removing the cooked food from the cooking space.....	12	8.11	Operating time.....	25
5	Function buttons	13	9	Cooker (depending on model)	26
5.1	Timer.....	13	9.1	Operating and display elements	26
5.2	Illumination	14	9.2	Cookware	26
5.3	Plate warmer	14	9.3	Operating the appliance	27
5.4	Fast heating	14	9.4	Cleaning and care for hotplates	27
5.5	Duration	14	10	Care and maintenance	28
5.6	End time.....	15	10.1	Cleaning the exterior	28
5.7	Delayed start.....	16	10.2	Cleaning the door seal	28
6	Operating modes	18	10.3	Replacing the door seal	28
6.1	Hot air.....	18	10.4	Cleaning the appliance door	29
6.2	Hot air humid	18	10.5	Cleaning the accessories and shelf guides...	31
6.3	Hot air eco.....	19	10.6	Cleaning the cooking space.....	31
6.4	PizzaPlus.....	19	10.7	Replacing the halogen light bulb.....	31
6.5	Grill-forced convection	20	11	Trouble-shooting	32
6.6	Grill.....	20	11.1	Error messages.....	32
6.7	Bottom heat.....	20	11.2	After a power failure	34
6.8	Top/bottom heat eco	21	12	Accessories and spare parts	34
6.9	Top/Bottom heat humid.....	21	12.1	Accessories.....	34
			12.2	Spare parts.....	34

13	Technical data	34
13.1	Light sources	35
13.2	Note for testing institutes.....	35
13.3	Temperature measurement.....	35
13.4	Product fiche.....	35
13.5	Product information	36
13.6	EcoStandby	36
14	Tips and tricks	36
14.1	Baking and roasting	36
14.2	Cake	37
14.3	Uneven browning	37
14.4	Saving energy.....	37
15	Disposal	38
16	Index	39
18	Service & Support	43

1 Safety precautions

1.1 Symbols used



Denotes important safety precautions.

Failure to observe said precautions can result in injury or damage to the appliance or equipment!



Information and notes to be observed.



Information on disposal



Information about the operating instructions

- ▶ Indicates step-by-step instructions.
 - Describes how the appliance reacts to the steps taken.
- Indicates a list.

1.2 General safety precautions



- Read the operating instructions before using the appliance for the first time.



- This appliance can be used by children aged 8 and above and by persons with reduced physical, sensory or mental capabilities, or lack of experience and/or knowledge, provided they are supervised or have been instructed on the safe use of the appliance and have understood the hazards involved. Children should be supervised to en-

sure that they do not play with the appliance. Cleaning and user maintenance shall not be undertaken by children without supervision.

- If an appliance is not equipped with a mains cable and a plug or other means for disconnecting from the mains with a contact opening on each pole complying with the conditions of overvoltage category III for full isolation, an isolating device must be incorporated into the permanently installed electrical installation in accordance with the installation regulations.
- If the mains cable of this appliance is damaged, it must be replaced by the manufacturer or its Customer Services or a similarly qualified person in order to avoid hazard.

1.3 Appliance-specific safety precautions



- **READ THE IMPORTANT SAFETY PRECAUTIONS CAREFULLY AND RETAIN FOR FUTURE USE.**
- **WARNING:** The appliance and its accessible parts get hot during use. Be careful not

- to touch the heating elements. Children under 8 years of age must be kept away from the appliance unless they are constantly supervised.
- **WARNING:** Accessible parts can get hot during use. Keep young children away from the appliance.
 - This appliance is intended for use in the home and similar settings such as: in staff kitchens in shops, offices and other commercial establishments; in agricultural establishments; by guests in hotels, motels and other accommodation establishments; in bed and breakfast establishments.
 - This appliance is not intended for use in vehicles or on board ships or aircraft or in rooms where there are special conditions such as, for instance, a corrosive or explosive atmosphere (dust, steam or gas) or condensing moisture.
 - Do not use aggressive or abrasive cleaning agents or sharp metal scrapers for cleaning the glass in the oven door and the operating panel as they could scratch the surface. This can destroy the glass.
 - Under no circumstances use a steam cleaner to clean the appliance.
 - **WARNING:** Before replacing the light bulb, ensure the appliance is switched off and disconnected from the mains power supply to avoid possible electric shock.
 - To avoid overheating, the appliance must not be installed behind a decor door.
 - **WARNING:** Never heat food or liquids in sealed containers such as cans or bottles as they are liable to explode due to overpressure.
 - See the «Accessories» section for the proper use of insertable parts.
 - **WARNING:** It can be dangerous to leave the hob unattended when cooking with fat or oil, as this can lead to fires. NEVER attempt to extinguish a fire with water. Instead, switch the appliance off and then carefully smother the flames with, for example, a lid or a fire blanket.
 - **WARNING:** Never store objects on the hob due to the risk of fire.

1.4 Instructions for use

Before using for the first time

- The appliance must be installed and connected to the electricity supply in accordance with the separate installation instructions. Have a qualified fitter/ electrician carry out the necessary work.

Correct use

- The appliance is designed for use in the home for preparing food. Under no circumstances flambé or cook food using a lot of fat in the cooking space! No liability is assumed for any damage caused by improper use or incorrect handling.
- Never use the appliance to dry animals, textiles, paper, etc.!
- Do not use the appliance as a room heater.
- The appliance should only be installed and operated at an ambient temperature of 5 °C to 35 °C.
- Any repairs, modifications or manipulations to the appliance, especially any electrically live parts, may only be carried out by the manufacturer, its Customer Services or a similarly qualified person. Repairs if carried out incorrectly may cause serious injury, damage to the appliance and fittings, as well as affect the functioning of the appliance. If the appliance is not working properly or in case a repair is needed, follow the instructions given in the «Service & Support» section. If required, please contact our Customer Services.
- Use original spare parts only.
- Retain these operating instructions for future reference.
- The appliance corresponds to recognized technology standards and the relevant safety regulations. Proper use of the appliance is essential to avoid damage and accidents. Please therefore follow the precautions given in these operating instructions.

Note on use

- Use the childproof locking facility.
- If the appliance is visibly damaged, do not use it. Contact our Customer Services.
- If the appliance is not functioning properly, disconnect it from the power supply immediately.
- Ensure there are no foreign bodies or pets in the cooking space before closing the appliance door.
- Objects that could pose a danger if the appliance were accidentally switched on should not be stored in the cooking space. Do not store food or any temperature-sensitive or inflammable materials, e.g. cleaning agents, oven sprays, etc., in the cooking space.
- For appliances with a grill: Keep the appliance door closed while grilling. The heat could otherwise damage the operating and display elements or the fitted units above.
- A delayed start is not possible for operating modes that use the grill.

Caution: Risk of burns!

- The appliance gets very hot when in use. The appliance door also gets hot.
- Steam and/or hot air may escape from the cooking space when the appliance door is opened.
- The heated appliance will remain hot for some time after it is switched off and will cool down only slowly to room temperature. Allow sufficient time for the appliance to cool down before, for instance, cleaning it.
- Overheated fat and oil can easily catch fire. Heating oil in the cooking space to sear meat is dangerous and should not be done. Never attempt to extinguish burning oil or fat with water. Danger of explosion! Smother the flames with a fire blanket. Keep doors and windows closed.
- Do not pour spirits (brandy, whisky, schnapps, etc.) over hot food. Danger of explosion!

1 Safety precautions

- Do not leave the appliance unattended when drying herbs, bread, mushrooms, etc. If the foodstuff dries out too much, it can pose a fire hazard.
- If you notice smoke possibly coming from a fire in the appliance or inside the cooking space, keep the appliance door closed and disconnect the appliance from the mains power supply.
- Accessories get hot in the cooking space. Use protective gloves or oven cloths.
- When cleaning the appliance make sure no water gets inside it. Use a moderately damp cloth. Do not spray the outside or the inside of the appliance with water. If water gets inside the appliance, it will cause damage.
- Do not leave the hotplates switched on at a high power level for any length of time without any cookware as this can damage them.

Caution: Risk of injury!

- Be careful not to put fingers in the door hinges, as there is otherwise a risk of injury if the appliance door is moved. Particular care should be taken when children are around.
- Only leave the appliance door open in the airing position. An open appliance door poses a danger of tripping or injury! Do not sit or rest on the appliance door or use it as a storage surface.
- For cookers: A hob guard can be fitted to protect small children. Hob guards are available from specialist retailers.

Caution: Risk to life!

- Danger of suffocation! Keep packaging material, e.g. plastic film and polystyrene, away from children. Packaging material can be dangerous for children.

How to avoid damaging the appliance

- Close the appliance door carefully.
- Do not use protective aluminium inserts with appliances with no visible bottom heating element.
- Do not use objects that can rust in the cooking space.
- Using knives or cutting wheels on the baking tray will visibly damage the surface.
- To prevent corrosion, leave the appliance door slightly ajar to allow the cooking space to cool down.

2 Using for the first time

Before operating the newly installed appliance for the first time, the following steps should be taken:

- ▶ Remove packaging and transport materials from out of the cooking space.
- ▶ Clean the cooking space and the accessories.
- ▶ Touch the ⚙ function button.
- ▶ Turn the — + dial to the left or right to set the time.
- ▶ Confirm with «OK».
 - The appliance is now ready for operation.
- ▶ Heat the empty cooking space (without wire shelves, baking trays, etc.) using the ☀ operating mode at the maximum cooking space temperature for approximately 1 hour.
- ▶ If your appliance comes with hotplates, heat each hotplate individually (without cookware) at full power for about 5 minutes.




Burning-in removes any oily residues in the cooking space. As there is likely to be some smoke and odour given off, animals (especially birds) should not be in the same room during the burn-in process. Ventilate the room well both during and after the process.

See separate operating instructions on using a glass ceramic hob for the first time and its operation and follow the instructions given.

3 Appliance description


3.1 Construction

- 1 Display
 - 2 Dials
 - 3 Ventilation opening
 - 4 Door handle
 - 5 Appliance door
 - 6 Appliance drawer * /
heatable appliance drawer *
- * Depending on model

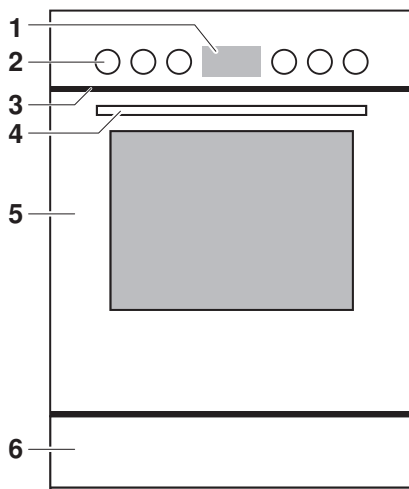

3.2 Cooking space

- 1 Appliance door
- 2 Door seal
- 3 Illumination
- 4 Hot air cover
- 5 Cooking space temperature sensor
- 6 Grill / top heat
- 7 Levels (labelled)

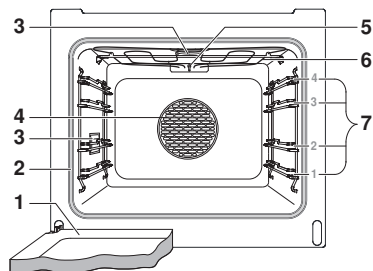


The bottom heating element is beneath the cooking space floor.






Using protective inserts or aluminium foil can damage the appliance.

Do not place any protective insert or aluminium foil on the floor of the cooking space.

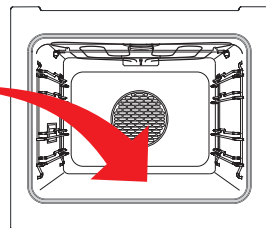

 3.3 Operating and display elements

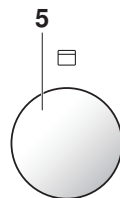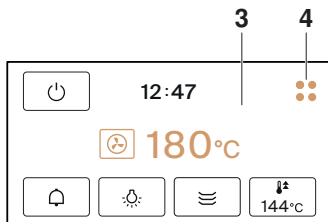

1 V-ZUG-Home

2 Cooking space temperature / time function

3 Display

4 Cooker operation indicator (depending on model)

5 Operating mode

Function buttons



Switching off



Time function



Display lock



Cooking space illumination



Plate warming without drawer (depending on model)



Plate warming with drawer (depending on model)



Fast heating with actual temperature display



Factory setting



Duration



End time

3.4 Accessories



 
 
Incorrect handling can cause damage!

Do not use knives or cutting wheels on the accessories.

Observe the correct use of the grill and oven furniture!


Baking tray

- Baking tin for flans and biscuits
- Use together with the wire shelf as a drip tray.
- If not fully covered by the baking, its shape can become distorted during baking. This is normal. As it cools down, it will go back to its original form.
- Ensure that the «sloped» side **1** of the baking tray is to the back of the cooking space.
- Only use the normal way round – not upside down.



Wire shelf

 - For standing roasting and baking tins on
- For standing meat, frozen pizza, etc. on
- Ensure that the bar **1** is to the back of the cooking space. This enables the food to be removed safely from the cooking space.
- Outside the cooking space – inverted – serves as a cooling rack.



Special accessories



Place any accessories not included in the scope of delivery on the wire shelf.

4 Operating the appliance

The $-$ $+$ and $\square$ dials beside the operating panel are for operating the oven and the outer $\odot$ and $\odot$ dials (if any) are for operating the hob.

4.1 Switching the appliance on

The appliance is operated using the display and the dial.

- Touch the display.
 - The start screen appears.

4.2 Selecting the operating mode and the cooking space temperature

- Select the desired operating mode using the $\square$ dial.
 - The operating mode selected and the preset cooking space temperature appear in the display.
 - The illumination is switched on.

4 Operating the appliance



Having selected the operating mode, the appliance starts automatically 3 seconds later.

During operation, the temperature can be changed using the – + dial and the operating mode can be changed using the  dial.

- The appliance accepts the change after 3 seconds.
- The illumination is switched on.

Operating modes



Hot air



Hot air humid



Hot air eco



PizzaPlus



Grill-forced convection



Grill



Bottom heat



Top/bottom heat eco



Top/bottom heat humid




Top/bottom heat

4.3 Display lock

This function locks the display to, for example, enable the display to be cleaned or prevent accidental changes to the values. The appliance continues to operate and messages are still displayed.

Turning on the display lock

- ▶ Hold the  function button depressed for 3 seconds.
 - Everything in the display is greyed out except for the time and the  symbol.
 - The display lock is activated for 30 seconds.

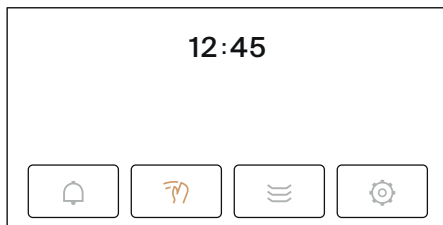

Turning off the display lock

- ▶ Hold the  function button depressed for 3 seconds.
 - The display is unlocked.

4.4 Switching the appliance off

- ▶ Touch the  function button or turn the  dial to the  symbol.
 - Operation is ended and the appliance enters standby within a few minutes.
 - The appliance switches off after it has cooled down.

4.5 Removing the cooked food from the cooking space



Risk of burns!

Hot air may escape from the cooking space when the appliance door is opened. The accessories get hot. Use protective gloves or oven cloths.

- ▶ Take the food out of the cooking space.
- ▶ To prevent corrosion, leave the appliance door open in the airing position until the cooking space has cooled down.

5 Function buttons


Various functions can be activated by touching the function buttons.

5.1 Timer

The timer functions like an egg timer. It can be used at any time and independently of all other functions.

Setting

- ▶ Touch the  button.
 - «-» appears in the display.
 - The colour of the  symbol changes to amber.
- ▶ Turn the – + dial to the left or right and set the duration.
 - The default setting when the dial is first turned is 5 minutes.

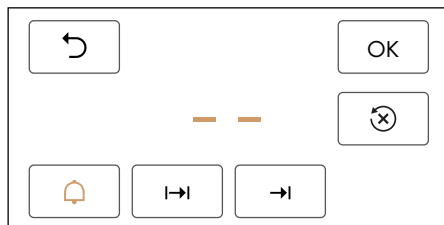

The timer can be set for:

- up to 10 minutes in 10-second intervals, e.g. «09min 50s» = 9 minutes and 50 seconds.
- over 10 minutes in 1-minute intervals, e.g. «1h 12min» = 1 hour and 12 minutes.

Starting

- The timer starts automatically after 10 seconds or touch «OK».

Displaying

- ▶ Touch the  button.
 - The duration remaining is visible in the display.
 - The colour of the  symbol changes to amber.

Set duration finished

When the set duration is up:

- a sequence of 5 short acoustic signals is repeated for 5 minutes.
- the colour of the  symbol changes to amber.
- ▶ Touch the  function button to turn off the acoustic signal.

Checking and changing

- ▶ Touch the  button.
 - The duration remaining appears in the display.
 - The colour of the  symbol changes to amber.
- ▶ Turn the – + dial to the left or right and change the duration of the timer.



Turning the timer off before time

- ▶ Touch the  button.
- ▶ Touch the  button.
- ▶ Confirm with «OK» or wait 10 seconds.
 - The timer is switched off.

5.2 Illumination

- ▶ Touch the  button to switch the cooking space illumination on and off.

5.3 Plate warmer

Option without heatable appliance drawer

- ▶ Put the wire shelf at level 1 and place the tableware on it.
- ▶ Touch the  button to switch the function on and off.
 - The  symbol appears in the display.
- ▶ Preheat the tableware for about 1 hour.
 - Use the  button to switch the function off.



The «Plate warming» function switches off automatically after 1 hour.

Option with heatable appliance drawer



Unauthorized storage of materials creates a fire hazard!

Do not store food or any temperature-sensitive or inflammable materials in the heatable appliance drawer.

The heatable appliance drawer can be used to preheat the tableware or to keep covered food warm for a short time.

- ▶ Touch the  button to switch the heatable appliance drawer on.
 - The colour of the  symbol changes to amber.
- ▶ Preheat the tableware for about 1 hour.
 - Use the  button to switch the function off.




The heatable appliance drawer switches off automatically after 1 hour.

5.4 Fast heating

Once the operating mode has started, the  function button appears bottom right. Preheating with «Fast heating» speeds up the , , , ,  and  operating modes.

- ▶ Select the desired operating mode and cooking space temperature.
 - The appliance starts.
- ▶ Touch the  function button.
 - The colour of the  function button changes to amber.
 - When an acoustic signal is emitted, the food can be placed in the cooking space.
- ▶ Touch the  function button to turn off Fast heating.

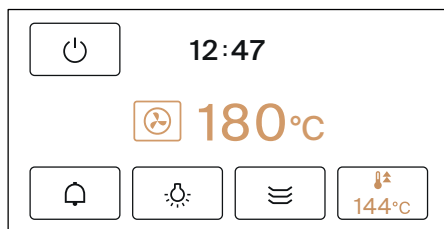


5.5 Duration

The operating mode selected ends automatically when the «Duration» (operating time) function finishes. An operating mode has to be selected before «Duration» can be set.

Setting

- ▶ Select the desired operating mode and cooking space temperature.

- ▶ Preheat the cooking space if necessary.
- ▶ Place the food in the cooking space.
- ▶ Touch the  function button.
- ▶ Touch the  function button.
 - «-» appears in the display.
 - The colour of the  symbol changes to amber.

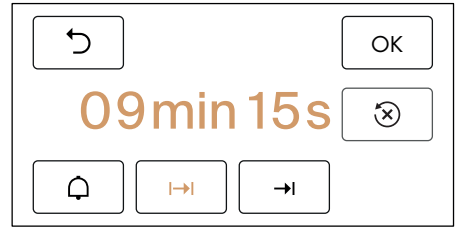

- ▶ Turn the – + dial to the left or right and set the duration.
 - In the display, the  function button shows the duration.



The maximum duration is 9 hours and 59 minutes.

- The setting is automatically accepted after 10 seconds.
- The duration remaining is visible in the display.

Changing the setting

- ▶ Touch the  function button.
 - The duration remaining appears in the display.
 - The colour of the  symbol changes to amber.
- ▶ Turn the – + dial to the left or right and change the duration.
 - The setting is automatically accepted after 10 seconds.
 - In the display, the duration remaining is visible in the  function button.

Cancelling the duration before time

- ▶ Touch the  function button.
- ▶ Touch the  button.
- ▶ Confirm the entry with «OK» or wait 10 seconds.
 - The duration is switched off and operation continues.

Duration finished

When the set duration is up:

- the operating mode selected ends automatically.
- the symbol for the operating mode selected appears.
- a long, intermittent acoustic signal is emitted for 5 minutes.
- ▶ Touch the  function button to turn off the acoustic signal.
 - The appliance is switched off.

Switching off

- ▶ Touch the  function button.
 - The appliance is switched off.

5.6 End time


The «End time» (switch-off time) function only functions if a time has been set. The operating mode selected ends automatically when the desired end time is reached. The operating mode has to be selected before an «End time» can be set.

Setting

- ▶ Select the desired operating mode and cooking space temperature.

5 Function buttons

- ▶ Preheat the cooking space if necessary.
- ▶ Place the food in the cooking space.
- ▶ Touch the ↶ function button.
- ▶ Touch the →I function button.
 - «-:→» appears in the display.
 - The colour of the →I symbol changes to amber.
- ▶ Turn the – + dial to the left or right and set the end time.
 - In the display appears the end time set, e.g.«13:45».

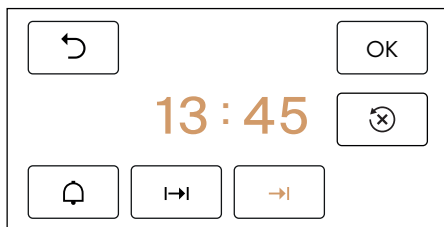

The end time can be delayed by a maximum of 23 hours and 59 minutes.

- ▶ The setting is automatically accepted after 10 seconds.
 - The duration remaining and the end time are visible in the display.

Example

- ▶ Select the  operating mode and 180 °C.
- ▶ At 11:45, set the end time for in 45 minutes.
 - The appliance will automatically switch off at 12:30.



Once the «End time» function is set, it can only be changed using «Duration» (see page 14).

Reaching the end time

When the end time is reached:

- the operating mode selected ends automatically.
- the symbol for the operating mode selected appears.
- a long, intermittent acoustic signal is emitted for 5 minutes.
- ▶ Touch the **X** function button to turn off the acoustic signal.
 - The appliance is switched off.

Switching off

- ▶ Touch the ⏻ function button.
 - The appliance is switched off.

5.7 Delayed start

The «Delayed start» function only functions if a time has been set. The appliance switches automatically on and off again at the desired times. An operating mode has to be selected before a «Delayed start» can be set.



Perishables should not be kept unrefrigerated.



A delayed start cannot be set for operating modes that use the grill.

Before setting the duration and delayed start

- ▶ Place the food in the cooking space.
- ▶ Select the desired operating mode and cooking space temperature.
- ▶ The appliance starts automatically.

- ▶ Set the duration and delayed start as described below.

Setting the duration

- ▶ Touch the  function button.
- ▶ Touch the  function button.
 - «->» appears in the display.
- ▶ Turn the - + dial to the left or right and set the duration.



The maximum duration is 9 hours and 59 minutes.

Setting a delayed start

- ▶ Touch the  function button within 10 seconds.
 - «->» appears in the display – end time without a delayed start.
- ▶ Turn the - + dial to the left or right and set the desired end time.




The maximum delayed start that can be set is 23 hours and 59 minutes.

- ▶ The setting is automatically accepted after 10 seconds.
 - The colour of the  symbol changes to amber.
 - The appliance switches off until the automatic start.

Example

- ▶ Select the  operating mode and 180 °C.
- ▶ At 11:00, set a duration of 1 hour and 15 minutes.
- ▶ Set the delayed start to 13:30.
 - The appliance switches on automatically at 12:15 and off again at 13:30.

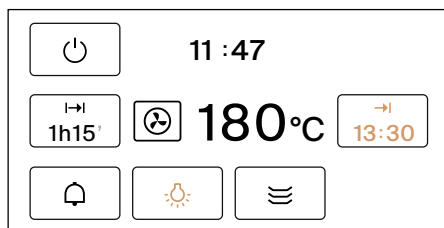

Changing the setting

- ▶ Touch the  function button.
 - The «Duration» is visible and can be changed.
- ▶ Turn the - + dial to the left or right and set the desired duration.
- ▶ Touch the  function button.
 - The «End time» appears for 10 seconds and can be changed.
- ▶ Turn the - + dial to the left or right and set the desired end time.



The «End time» function can only be changed for a delayed start.

Duration finished

When the set duration is up:

- the operating mode selected ends automatically.
- the symbol for the operating mode selected appears.
- a long, intermittent acoustic signal is emitted for 5 minutes.
- ▶ Touch the  function button to turn off the acoustic signal.
 - The appliance is switched off.

Cancelling a delayed start before time

- ▶ Touch the  function button.

6 Operating modes

- ▶ Touch the  button.
- ▶ Confirm the entry with «OK» or wait 10 seconds.
 - The delayed start is cancelled.

Switching off

 
- ▶ Touch the  function button.
 - The appliance is switched off.

6 Operating modes

All the operating modes are described below.

For the grill and bottom heat, the temperature can be set at one of five levels, with level 1 being the lowest and level 5 the highest heat setting.

- ▶ Place tins, moulds, etc. on the wire shelf.
- ▶ Ensure that the «sloped» side **1** of the baking tray is to the back of the cooking space.



Follow the advice in «Tips and tricks» in the separate «EasyCook brochure».

6.1 Hot air



Temperature range	30–280 °C
Recommended value	180 °C
Level	1 + 3 or 2



A heating element behind the back wall of the cooking space heats up the air inside the cooking space, which is circulated evenly.

Uses

- Particularly suitable for baking savouries and biscuits on several levels at the same time.
- Cakes and bread




Select a lower temperature (reduce by approximately 20 °C) than for  as the heat transfer is more efficient.

6.2 Hot air humid



Temperature range	30–250 °C
Recommended value	180 °C
Level	1 + 3 or 2

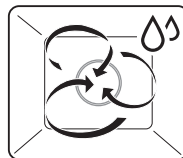

A heating element behind the back wall of the cooking space heats up the air inside the cooking space, which is circulated evenly. Any moisture that escapes from the food is retained in the cooking space, so the food dries out less.

Uses

- For savouries and biscuits on several levels at the same time
- For yeast pastries and bread on several levels at the same time
- Gratin, baked and braised dishes

 Select a lower temperature (reduce by approximately 20 °C) than for  as the heat transfer is more efficient.

6.3 Hot air eco



Temperature range	30–250 °C
Recommended value	180 °C
Level	1 + 3 or 2



This operating mode is particularly energy-efficient. A heating element behind the back wall of the cooking space heats up the air inside the cooking space, which is circulated evenly. Any moisture that escapes from the food is retained in the cooking space, so the food dries out less.

Uses

- Roasts, gratins, savouries and biscuits


 When baking using this operating mode, do not preheat. This lowers the energy consumption. The cooking time can be longer than with classical hot air.

 Select a lower temperature (reduce by approximately 20 °C) than for  as the heat transfer is more efficient.

6.4 PizzaPlus



Temperature range	30–280 °C
Recommended value	200 °C
Level	2 (or 1)

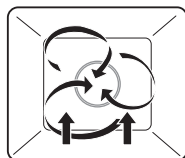

The cooking space is heated by hot air and bottom heat. The base of the food is baked particularly intensively.

Uses


- Pizza
- Flans and quiches

 Use a dark enamelled tray or a black tray or tin without baking paper for very crispy results.

6.5 Grill-forced convection



Temperature range	30–280 °C
Recommended value	200 °C
Level	2 or 3

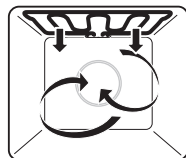

The cooking space is heated by the grill element. The hot air fan distributes the air evenly in the cooking space.


Uses

- Whole chicken (large, bulky food)
- Put food for grilling in a porcelain or glass dish or directly on the wire shelf.
- ▶ Line the baking tray with aluminium foil and then place it underneath the wire shelf.

6.6 Grill



Temperature range	in 5 levels
Recommended value	Level 3
Level	3 or 4

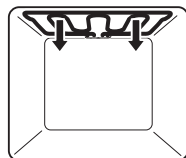

The cooking space is heated by the grill element.

Uses

- Flat food for grilling, e.g. steaks, chops, chicken parts, fish and sausages
- Gratinating
- Toast
- ▶ Place the food to be grilled directly on the wire shelf.
- ▶ Line the baking tray with aluminium foil and then place it underneath the wire shelf.




For best results, preheat the cooking space for 3 minutes before introducing the food.

6.7 Bottom heat



Temperature range	in 5 levels
Recommended value	Level 3
Level	2 (or 1)

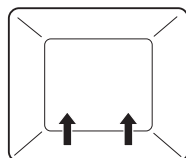

The cooking space is heated by the bottom heating element.

Uses

- Baking flan bases
- Making preserves




Use a dark enamelled tray or a black tray or tin for crispy results.

6.8 Top/bottom heat eco



Temperature range	30–250 °C
Recommended value	200 °C
Level	2 (or 1)

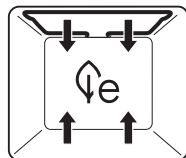

This operating mode is particularly energy-efficient. The cooking space is heated by the top and bottom heating elements. Any moisture that escapes from the food is retained in the cooking space, so the food dries out less.

Uses

- Roasts, gratins, savouries and biscuits



When baking using this operating mode, do not preheat. This lowers the energy consumption. The cooking time can be longer than with top/bottom heat.




Use a dark enamelled tray or a black tray or tin for crispy results.

6.9 Top/Bottom heat humid



Temperature range	30–250 °C
Recommended value	200 °C
Level	2 (or 1)

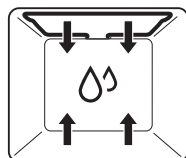

The cooking space is heated by the top and bottom heating elements. Any moisture that escapes from the food is retained in the cooking space, so the food dries out less.


Uses

- Bread, plaited bread, roasts and gratins on one level
- Low temperature cooking

6.10 Top/Bottom heat



Temperature range	30–280 °C
Recommended value	200 °C
Level	2 (or 1)

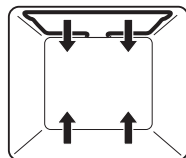

The cooking space is heated by the top and bottom heating elements.

Uses

- Classic operating mode for cooking and baking on one level
- Cakes, biscuits, bread and roasts



Use a dark enamelled tray or a black tray or tin for crispy results.

7 V-ZUG-Home



Download updates to your appliance via V-ZUG-Home so that you are always up to date.

Hereby, V-ZUG Ltd declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <https://www.vzug.com/gb/en/guidance-for-testing-institutes>

7.1 Conditions

The following conditions must be met for full use of V-ZUG-Home:

- Access to the internet and to Google Play™ Store / App Store®
- Smartphone or tablet that is connected to the home network
- WLAN/Wi-Fi that meets one of the following standards: 2.4GHz 802.11 b/g/n



Google Play™ is a trademark of Google Inc.



Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store® is a service mark of Apple Inc.

7.2 Initial set-up



When establishing a connection, stay close to your household appliance and have the password for your wireless network at the ready.

Installing the app

- ▶ Enable bluetooth and location determination on the smartphone or tablet.
- ▶ Search the Google Play™ Store or the App Store® for «V-ZUG».
- ▶ Install and open the V-ZUG App.

Enabling the V-ZUG-Home mode on the appliance

- ▶ Enable the connection under «V-ZUG-Home» in the user settings.

Connecting the appliance to the home network


- ▶ In the V-ZUG App, add the household appliance.
 - A bluetooth pairing request appears in the V-ZUG App.
 - A 6-digit PIN appears in the display of the household appliance.
- ▶ Enter the 6-digit PIN in the V-ZUG App and confirm the bluetooth pairing request.
 - The name of the active WLAN/Wi-Fi appears in the V-ZUG App and then you are prompted to enter the WLAN/Wi-Fi password.
- ▶ Enter the WLAN/Wi-Fi password.
 - The household appliance is connected to the active WLAN/Wi-Fi connection.



Further information on V-ZUG-Home and its availability can be found at [vzug.com](https://www.vzug.com).

7.3 Updating the appliance

While the appliance software is being updated via the V-ZUG App, three dots appear in the display.

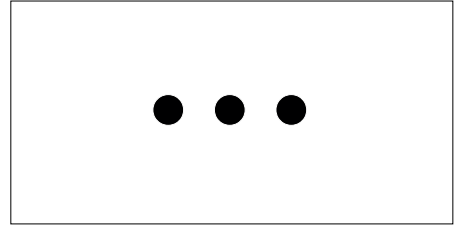

Do not disconnect the appliance from the mains during the software update.

8 User settings

The following settings can only be made in the Off operating state.

8.1 Overview of settings



Time



Time display



Childproof lock



Acoustic signal



V-ZUG-Home



V-ZUG-Home reset



Factory settings

8.2 Adjusting user settings

- ▶ Touch the display.
 - The start screen appears.
- ▶ Touch the ⚙ function button.
- ▶ Select user setting or confirm with «OK», if required.
 - Use ➤ to scroll up and down.
- ▶ Make the desired setting.
- ▶ To save the change and exit the menu, touch «OK».
- ▶ To discard or exit the user settings, touch ↶.



The settings are retained in the event of a power failure, only the time needs to be reset.

8.3 Time



The time cannot be changed if the appliance is in operation or if a delayed start has been set.

Setting the time

- ▶ Touch the ⌚ function button.
 - The time appears in the display.
 - The colour of the ⌚ symbol changes to amber.
- ▶ Turn the – + dial to the left or right and set the time.
- ▶ Either save the change with «OK» or cancel it with ↶.

8.4 Time display

The time can either be displayed or not be displayed in standby mode.

- ▶ Touch the  function button.
 - Two options appear in the display.
 - The colour of the  and  symbols changes to amber.
- ▶ Touch  to display the time in standby.
- ▶ Touch  to not display the time in standby.
- ▶ Either save the change with «OK» or cancel it with .



To reduce power consumption to a minimum, select «Time display invisible» in the user settings. Despite EcoStandby, the safety functions remain active.

8.5 Childproof lock



The childproof lock does not prevent the accidental operation of the hob.

The childproof lock only blocks the operation of the oven.



The childproof lock is automatically reactivated within 5 minute of switching off the appliance.

If the display or a dial is pressed or turned when the childproof lock is activated,  is shown in the display.

- ▶ Touch the  function button.
 - Two choices appear in the display.
 - The colour of the  and  symbols changes to amber.
- ▶ Touch  to activate the childproof lock.
- ▶ Touch  to deactivate the childproof lock.
- ▶ Either save the change with «OK» or cancel it with .

Operation with childproof lock activated

- ▶ Hold the  symbol in the display depressed for 3 seconds.
 - The childproof lock is overridden.
 - It can now be operated as normal.

8.6 Acoustic signal

The acoustic signal can be changed to level 1 (factory setting) or level 2.

- ▶ Touch the  function button.
 - Two options appear in the display.
 - The colour of the  and  symbols changes to amber.
- ▶ Touch  to change the acoustic signal to level 1.
- ▶ Touch  to change the acoustic signal to level 2.
- ▶ Either save the change with «OK» or cancel it with .

8.7 V-ZUG-Home

The V-ZUG-Home connection can be enabled.

Enabling V-ZUG-Home

- ▶ Touch the  function button.
 - Two choices appear in the display.
 - The colour of the  and  symbols changes to amber.

- ▶ Touch ✓ to enable the V-ZUG-Home connection.
- ▶ Touch ✗ to disable the V-ZUG-Home connection.
- ▶ Either save the change with «OK» or cancel it with ↶.



Further information on V-ZUG-Home and its availability can be found at vzug.com.

8.8 Resetting V-ZUG-Home

The V-ZUG-Home connection can be reset.

Resetting the V-ZUG-Home connection

- ▶ Touch the ↶ function button.
 - The ↶ symbol appears in the display.
 - The colour of the ↶ symbol changes to amber.
- ▶ Touch ↶ to reset the V-ZUG-Home connection.
 - «DONE» is shown in the display.
- ▶ Touch ✗ to exit the message.

8.9 Factory settings

User settings that have been changed can be restored to the factory settings.

Restoring the factory settings

- ▶ Touch the ↶ function button.
 - The ↶ symbol appears in the display.
 - The colour of the ↶ symbol changes to amber.
- ▶ Touch ↶ to restore the factory settings.
 - «DONE» is shown in the display.
- ▶ Touch ✗ to exit the message.

8.10 Demo mode

In the demo mode, almost all the appliance functions are available – but it is not possible to cook with the appliance. This ensures operating safety during product demonstrations and consultations.

The demo mode can be switched on and off using the following combination of buttons:

- ▶ With the appliance switched off, hold the ⚙ function button depressed for 3 seconds.
- ▶ Touch the 🔔, ⚙ and ⌂ function buttons in sequence.
 - «DEMO:ON» or «DEMO:OFF» is shown in the display.

8.11 Operating time

The operating time of the appliance is only displayed in the off state.

- ▶ Hold the ⚙ function button depressed for 3 seconds.
- ▶ Touch the ⌂, ⚙ and 🔔 function buttons in sequence.
 - The display shows e.g. «00000210h».



The operating time cannot be reset.

9 Cooker (depending on model)

Depending on the model, the cooker comes with a glass ceramic hob or hotplates. In the case of a glass ceramic hob, please follow the relevant operating instructions.



Never switch the hotplates on, especially at a high power level, without any cookware as overheating can damage them.

Do not stand cold cookware on hot hotplates as the large difference in temperature could damage them.

Under no circumstances attempt to cool hot hotplates down as this could otherwise damage them.




A hob guard can be fitted to protect small children. Hob guards are only available from specialist retailers.

9.1 Operating and display elements

Operating panel

The type and layout of the elements depend on the model and its features.

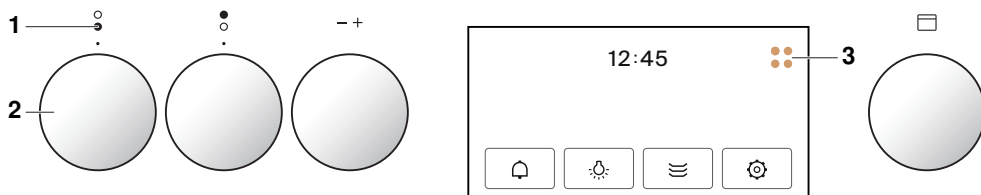


1 Cooking zone indicator lights front/back

2 Dials

3 Cooker operation indicator

Dials

The power levels are on the dials.

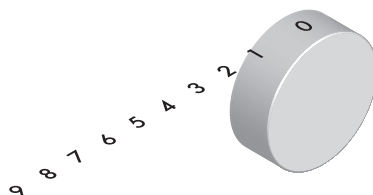

Cooker operation indicator

When one or more cooking zones are switched on  is shown in the display.

9.2 Cookware

Suitable cookware

Cookware should have a stable bottom. When heated, the base of the cookware must lie flat on the surface of the cooking zone.

Cookware made of metal is more suitable than that made of glass or ceramic as with metal the heat is distributed evenly quicker.

Cookware bases made of aluminium or aluminium alloys can leave stubborn abrasion marks on the glass ceramic surface that are very difficult to remove.

Energy-efficient cooking

For maximum energy efficiency and even heat distribution note the following:

- The base of the cookware must be clean, dry and smooth.
- The diameter of the base of the cookware should correspond as far as possible to the diameter of the cooking zone.
- Centre the cookware in the middle of the cooking zone.
- Use a well-fitting lid.
- Match the diameter of the cookware to the quantity of food to be cooked.

9.3 Operating the appliance

The individual cooking zones are all operated in the same way.

Selecting cooking zone

- ▶ Turn the dial to the required power level.



For normal cooking zones, the dial can be turned past the «0» power level in both directions.

For dual ring cooking / frying zones, the dial has an end stop. It can only be turned in a clockwise direction and back again in an anti-clockwise direction.

- ▶ Turn the dial for the required dual ring cooking / frying zone as far as it will go.
 - A click can be heard.
- ▶ Turn the dial to the required power level.

Overview of power levels

Power level	Cooking method	Use
1	Melting, gentle warming	Butter, chocolate, gelatine, sauces
2		
3	Swelling	Rice
4	Continue cooking, reducing, stewing, steaming	Vegetables, potatoes, sauces, fruit, fish
5		
6	Continue cooking, braising	Pasta, soup, braised meat
7	Gentle frying	Rösti, omelettes, breaded fried foods, sausages
8	Frying, deep frying	Meat, chips
9	Flash frying, fast heating	Steaks, boiling water

Switching cooking zone off

- ▶ Set the dial for the required cooking zone to power level «0».

9.4 Cleaning and care for hotplates



Risk of burns! Allow the appliance to cool down before cleaning.

Always clean the hotplates after use. This prevents food residue from burning on. Dried-on or burned-on food residue is harder to clean off.

- ▶ Use only a soft cloth or sponge with water and a suitable detergent for cleaning everyday soiling.
- ▶ Dry hotplates with a soft cloth.



Use of a protective care agent is recommended.

Over time, the strong heat will cause the stainless steel ring around the hotplates to become discoloured, turning yellowish. Discolouration is normal and cannot be removed by cleaning.

10 Care and maintenance



Risk of burns from hot surfaces!

Allow the appliance and the accessories to cool down before cleaning.

Incorrect handling can result in damage to the appliance!

Use soft cloths only. Do not use any abrasive or caustic cleaning agents, metal scrapers that are sharp or scratch, steel wool, scouring pads, etc. These products will damage the surfaces. Glass surfaces that are scratched can crack.

Never use a steam cleaner to clean the appliance.

10.1 Cleaning the exterior

- ▶ Remove any soiling or excess cleaning solution immediately.
- ▶ Clean the surfaces with a soft cloth dampened with water and a little washing-up liquid.
- ▶ Dry with a soft cloth.

Heatable appliance drawer

The drawer can be removed for ease of cleaning.

- ▶ Pull out the drawer as far as the stopper will allow, lift slightly and remove from the front.


10.2 Cleaning the door seal

- ▶ Clean the door seal with a soft cloth dampened with water, but do not use any cleaning agent.
- ▶ Dry with a soft cloth.

10.3 Replacing the door seal

Removing the door seal

- ▶ In each of the four corners, turn the seal outwards by about 30° and carefully pull the clip out of the slot.
- ▶ When all four clips have been released, remove the seal.
- ▶ Clean the groove in the appliance with a damp cloth.

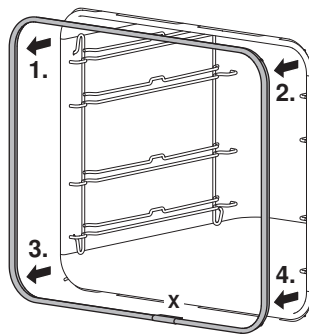


Fitting the door seal



The joint **X** and vent hole must be at the bottom in the middle.

- ▶ Fit the seal starting in one of the corners at the top.
- ▶ Insert the clip from the outside to the inside at a 30° angle into the slot. Once the seal is fitted at the top, insert the bottom two clips.
- ▶ Press the door seal into the groove all around, i.e. at the top, bottom, left and right.

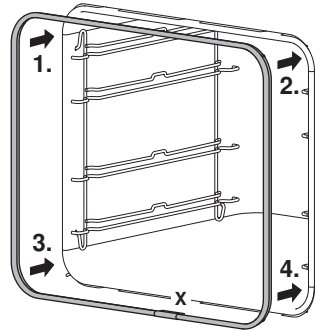

10.4 Cleaning the appliance door


- ▶ Clean the appliance door with a soft cloth dampened with water and a little washing-up liquid.
- ▶ Dry with a soft cloth.

Removing the appliance door




The appliance door is heavy. When removing and reinstalling the appliance door, hold it at the sides firmly with both hands.

- ▶ Open the appliance door as far as it will go.
- ▶ Fold the clips **2** on both door hinges **1** forward.

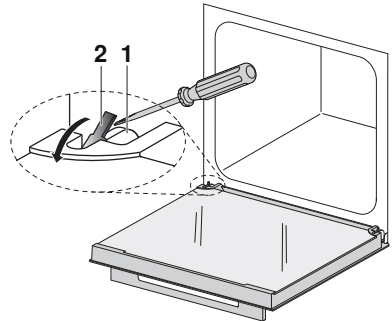


- ▶ Close the appliance door as far as its airing position (about 30°).
- ▶ Lift the appliance door out evenly and at an angle.

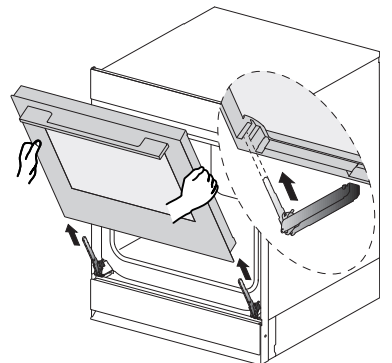

Reinstalling the appliance door



- ▶ Push the appliance door **3** evenly into both hinges **1** as far as it will go.
- ▶ Open the appliance door as far as it will go and fold back the clips **2**.
 - If the appliance door will not close properly, check the clips **2**.
 - Do not force the appliance door closed.

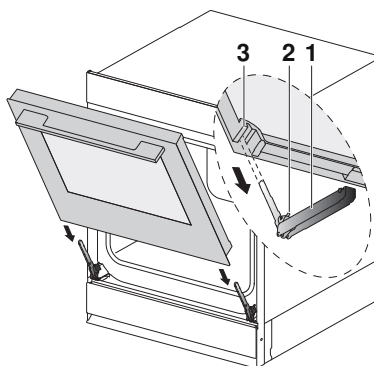


Ensure that the appliance door is pushed in as far as it will go otherwise the appliance could get damaged when it is closed.

Cleaning the door glass


- ▶ Lay the appliance door on a clean, flat surface (covered e.g. with a tea towel) with the handle facing down.
 - Make sure the handle does not come into contact with the surface.
- ▶ Lean against the appliance door.
- ▶ Gently push the outer glass **1** and raise it slightly up and away from the hinges.
- ▶ Remove the intermediate door glass seal **2**.
- ▶ Gently push the middle door glass **3** and raise it slightly up and away from the hinges.
- ▶ Clean the glass panels and dry well.

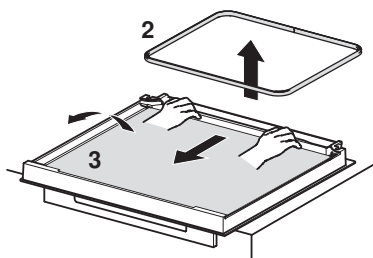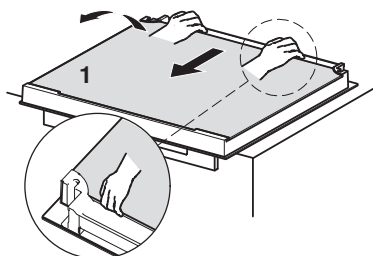

- ▶ Reassemble the glass panels as follows: Insert the middle door glass **3** into the door frame and gently push it back towards the hinges.
 - The markings on the glass must be legible.
- ▶ Reinstall the intermediate door glass seal **2**.

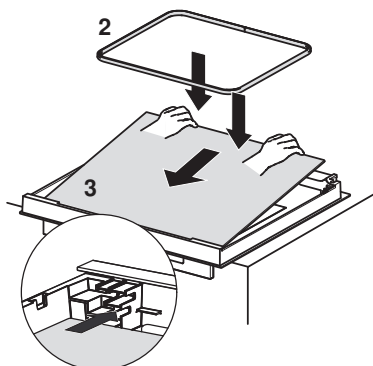

- ▶ Insert the outer door glass **1** into the door frame and gently push it back towards the hinges.
 - The outer door glass **1** can only be put back if positioned correctly with the shiny surface on the outside.

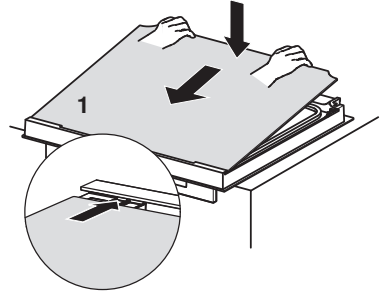

10.5 Cleaning the accessories and shelf guides


- The wire shelf and shelf guides can be cleaned in the dishwasher.
- The baking tray can be cleaned in the dishwasher; however, this will affect its non-stick properties.

Removing and putting back the shelf guides



When inserting the shelf guides take care not to damage the enamel.

- ▶ Swing the shelf guide at the front into the middle of the cooking space.
- ▶ Take the shelf guide out of the opening at the back.
- ▶ Put back in reverse order.

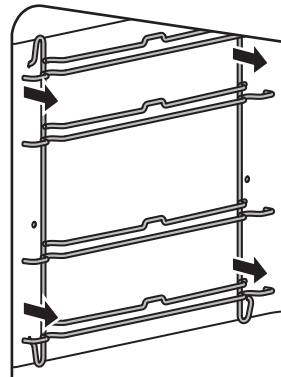

10.6 Cleaning the cooking space



Incorrect handling can result in damage to the appliance!

Do not bend the cooking space temperature sensor or heating elements.
Do not scour the surface. This can damage the enamel.

- ▶ Remove any soiling from the cooking space while still hand warm. Use a soft cloth dampened with water and a little washing-up liquid. Wipe dry with a soft cloth.

10.7 Replacing the halogen light bulb



WARNING: Risk of electric shock!

Disconnect the appliance from the mains power supply before replacing the halogen light bulb.

Risk of burns from hot surfaces!


Allow the halogen light bulb and the appliance to cool down before replacing the halogen light bulb.



Do not touch the halogen light bulb with bare hands. Instead, use a fine, dry, grease-free cloth.


Overhead illumination

- ▶ Carefully unscrew the glass light cover **1** anti-clockwise and remove.
- ▶ Take out the faulty halogen light bulb.
- ▶ Carefully plug the new halogen light bulb into the socket – halogen type G9 / 25 W / 230 V.
- ▶ Turning clockwise, screw the glass light cover back in place.
- ▶ Reconnect the power supply.

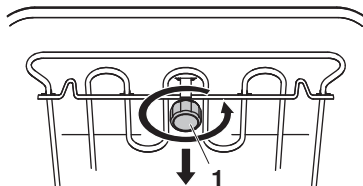

Lateral illumination

- ▶ Remove the left shelf guide.
- ▶ Place the screwdriver along the middle of the edge of the glass light cover and carefully remove the glass light cover **2** from its fixture.
- ▶ Take out the faulty halogen light bulb.
- ▶ Carefully plug the new halogen light bulb into the socket – halogen type G9 / 25 W / 230 V.
- ▶ Press the glass light cover **2** back into its fixture.
- ▶ Put the shelf guide back.
- ▶ Reconnect the power supply.

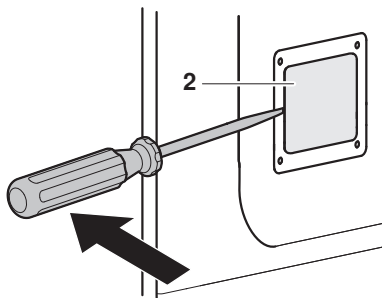

11 Trouble-shooting

You may be able to trouble-shoot the following malfunctions yourself. If not, note down the error message in full (message, F and E numbers) and call Customer Services.

11.1 Error messages

Message	Possible cause	Solution
The appliance is not working	▪ A household fuse or circuit breaker has tripped.	▶ Set all the dials to «0».
		▶ Change the fuse.
		▶ Reset the circuit breaker.
	▪ The fuse or circuit breaker keeps blowing.	▶ Call Customer Services.
	▪ Interruption in the power supply.	▶ Check the power supply.
	▪ Demo mode is switched on.	▶ Switch the demo mode off.
		▶ Hold the  function button depressed for 3 seconds.
		▶ Touch the  ,  and  function buttons in sequence.
		– The display shows «DEMO:OFF».

Message	Possible cause	Solution
The illumination is not working	▪ The halogen light is faulty.	▶ Set all the dials to «0». ▶ Disconnect the appliance from the electricity supply. ▶ Replace the halogen light bulb.
Noise occurs during operation	▪ Appliance can make noises during operation (e.g. switching noises).	– Such noise is normal.
Thick smoke is given off when heating up or cooking	▪ If dirty, the cooking space can give off smoke when heated.	▶ Clean the cooking space when it has cooled down. Under no circumstances use strong detergent or abrasive scouring pads.
Thick smoke is given off when grilling	▪ The food is too near to the heating elements.	▶ Check that the level selected is as recommended in «Tips and tricks» and in the separate «EasyCook brochure».
	▪ The cooking space temperature is too high.	▶ Reduce the cooking space temperature.
🔒 appears in the display.	▪ The childproof lock is activated.	▶ See the User settings (see page 25) for how to operate the appliance with the childproof lock activated.
«DEMO:ON» appears in the display.	▪ Demo mode is activated.	▶ Switch the demo mode off. ▶ Hold the  function button depressed for 3 seconds. ▶ Touch the ,  and  function buttons in sequence. – The display shows «DEMO:OFF».
«A1/E15» appears in the display.	▪ The maximum operating time has been exceeded.	▶ Acknowledge the message with «X».
«Fxx/Exx» appears in the display.	▪ Various situations can lead to this error message.	▶ Acknowledge the message with «X» if possible.
«Uxx/Exx» appears in the display.		▶ Switch the power supply off for about 1 minute. ▶ Switch the power supply back on. ▶ If the error appears again, note down the error message in full along with the serial number (SN). ▶ Disconnect from the power supply. ▶ Call Customer Services.

11.2 After a power failure



The user settings remain unchanged.

Problem	Solution
Power failure	▶ Touch the  function button. ▶ Turn the – + dial to the left or right to set the time. ▶ Confirm with «OK». – If V-ZUG-Home has been enabled, the appliance reconnects automatically and the time is set automatically after a short time.

Power failure during operation

- The current operation of the appliance is cancelled.

12 Accessories and spare parts

Please give serial number of the appliance and exact designation of the accessory or spare part when ordering parts.

12.1 Accessories

Baking tray



Wire shelf

 


EasyCook brochure




12.2 Spare parts


Shelf guides, left/right



Halogen light bulb

 

Door seal

 

The halogen light bulb is also available from specialist retailers.


13 Technical data

External dimensions

- ▶ See installation instructions

Electrical connection

- ▶ See identification plate 1

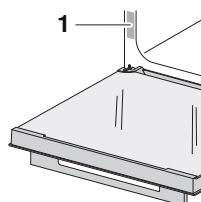

13.1 Light sources

This product contains light sources of energy efficiency class G.

13.2 Note for testing institutes

The energy efficiency class according to EN 50304 / EN 60350 is determined using the  and  operating modes.

Placing thermocouples between the appliance door and the seal can cause lack of leak-tightness and thus measuring errors.

The usable volume within the meaning of EN 50304 / EN 60350 is obtained with the shelf guides disassembled.

- For appliances with a grill: Keep the appliance door closed while grilling. The heat could otherwise damage the operating and display elements or the fitted units above.

13.3 Temperature measurement

The temperature inside the cooking space is measured when the cooking space is empty according to an internationally accepted standard. Own measurements can be imprecise and are not suitable for checking the accuracy of the temperature.

13.4 Product fiche

In accordance with EU Regulation No.: 65/2014

Brand	–	SIBIR Ltd
Type of appliance	–	Built-in oven Built-in cooker
Model designation	–	EB/EH Tritherm V600
Model number	–	21127, 21133, 22034
Energy efficiency class	–	A
Energy consumption of conventional mode ¹⁾	kWh/cycle	0.8
Energy consumption of hot air / forced convection mode ²⁾	kWh/cycle	0.79
Energy Efficiency Index per cavity ²⁾	–	94.1
Number of cavities	–	1
Measurement and calculation methods used	–	EN-60350-1

In accordance with EU Regulation No.: 65/2014

Brand	–	SIBIR Ltd
Type of appliance	–	Built-in cooker
Model designation	–	EH Tritherm V600
Model number	–	22031
Energy efficiency class	–	A
Energy consumption of conventional mode ¹⁾	kWh/cycle	0.9
Energy consumption of hot air / forced convection mode ²⁾	kWh/cycle	0.8
Energy Efficiency Index per cavity ²⁾	–	95.3
Number of cavities	–	1

In accordance with EU Regulation No.: 65/2014

Measurement and calculation methods used	–	EN-60350-1
--	---	------------

- 1) Required to heat a standardized load per cavity
- 2) Measurement methods: see EU Regulation No. 66/2014, Annex II, Chpt. 1

13.5 Product information

In accordance with EU Regulation No.: 66/2014

Model designation	–	EB/EH Tritherm V600
Mass of SMS 55-600 55-762 appliance	kg	- 48
Mass of EURO 60-600 60-762 appliance	kg	36 -
Heat source per cavity	–	Electricity
Volume per cavity	l	69

13.6 EcoStandby

To prevent unnecessary energy consumption, the appliance is equipped with the automatic energy-saving «EcoStandby» function.



You can reduce the power consumption to a minimum by selecting «Time display invisible» in the user settings. Despite EcoStandby, the safety functions remain active.

In accordance with EU Regulation No. 2023/826

Off mode	W	–
Power consumption in standby mode	W	0.20
Standby mode with information or status display	W	0.80
Networked standby mode	W	1.80
Time required for the appliance to automatically reach the applicable low-power mode.	Mins	4

14 Tips and tricks

14.1 Baking and roasting

Result	Solution
The baking or roast looks good on the outside but is still doughy or raw on the inside.	- Next time, set a lower temperature and lengthen the operating time. - Check that the settings selected correspond to those recommended in the separate «EasyCook brochure».

14.2 Cake

Result	Solution
The cake collapses.	- Check that the settings selected correspond to those recommended in the separate «EasyCook brochure». - Next time, set a lower temperature and lengthen the operating time. - Stir the cake mixture well. When finished, bake immediately. - For whisked sponges, beat the egg yolks/whites to a foam a little longer and then carefully fold into the mixture. When finished, bake immediately. - Follow the instructions on how much baking powder to add.

14.3 Uneven browning

Result	Solution
The baking has browned unevenly.	- Next time, set a lower temperature and lengthen the duration. - If using , ,  or , check that the levels selected are as recommended in the separate «EasyCook brochure». - Ensure that the «sloped» side of the baking tray is to the back of the cooking space. - Select  if baking on one level. - Do not push baking tins or large, bulky foodstuff right to the back of the cooking space.
The baking has come out lighter on one baking tray than on the other.	Check that the settings selected correspond to those recommended in the separate «EasyCook brochure».



Some uneven browning is normal. More even browning is generally achieved at lower cooking space temperatures.

14.4 Saving energy

The , ,  and  operating modes consume less energy than the  and  operating modes.

- Only switch the illumination on when needed.
- Avoid opening the appliance door frequently during operation.
- Use residual heat: for longer cooking times, i.e. over 30 minutes duration, switch the appliance off 5–10 minutes before the end of the cooking time. Exceptions: soufflé, sponge, choux pastry and puff pastry.
- Only preheat the cooking space if the baking results depend on it.
- Minimize preheating – preheating does not tend to be needed with longer cooking times.



You can reduce the power consumption to a minimum by selecting «Time display invisible» in the user settings. Despite EcoStandby, the safety functions remain active.

15 Disposal

15.1 Packaging



Never allow children to play with packaging material due to the danger of injury or suffocation. Store the packaging material in a safe location or dispose of it in an environmentally-friendly way.

15.2 Safety

Render the appliance unusable to prevent accidents caused by improper use (e.g. through children playing):

- ▶ Disconnect the appliance from the mains. With a fixed appliance, this is to be carried out by a qualified electrician. Then cut the mains cable off flush with the appliance.

15.3 Disposal



-  The «crossed out wheeled bin» symbol requires the separate collection of waste electrical and electronic equipment (WEEE). Such equipment can contain hazardous, environmentally harmful materials.
- These appliances are to be handed over to a designated collection point for the recycling of electrical and electronic equipment and must not be disposed of with unsorted household waste. And in this way, you will be helping to protect resources and the environment.
- For more information, please contact the local authorities.

16 Index

A

Accessories	11, 34
Ordering	43
Acoustic signal	24
Adjusting user settings	23
Appliance	
Disposal	38
Appliance door	
Reinstalling	30
Removing	29

B

Baking and roasting	36
Baking tray	11, 34
Bottom heat	10, 20

C

Cake	37
Care	28
Changing the operating mode	12
Childproof lock	24
Cleaning	28
Accessories	31
Appliance door	29
Cooking space	31
Door glass	30
Door seal	28
Shelf guides	31
Cleaning and care for hotplates	27
Cleaning the exterior	28
Cooker	26
Cookware	26
Operating and display elements	26
Operating the appliance	27
Cooking space	10
Cleaning	31
Temperature measurement	35
Cookware	26

D

Delayed start	16
Demo mode	25
Dials	26
Display lock	12
Displays	26
Disposal	38
Door seal	34
Duration	14

E

EasyCook	34
EcoStandby	36
Electrical connection	34

Enabling V-ZUG-Home	24
End time	15
Energy-efficient cooking	27
Error messages	32
External dimensions	34

F

Factory settings	25
Fast heating	14
Function buttons	13

G

Grill	20
Grill-forced convection	20

H

Halogen light bulb	34
Replacing	31
Heatable appliance drawer	14
Cleaning	28
Hot air	18
Hot air Eco	19
Hot air humid	18
Hot air with bottom heat	19

I

Identification plate	34, 43
Illumination	14

L

Lateral illumination	32
Levels	10

M

Malfunctions	32
Model designation	2

O

Operating modes	18
Operating the appliance	11
Operating time	25
Overhead illumination	32

P

Plate warming	14
Power failure	34
Power levels	27
Preheating	37
Problems	32
Product information	36

Q

Queries	43
---------------	----

R

Removing food from cooking space	12
Resetting V-ZUG-Home	25

S

Safety precautions	
Appliance-specific	5
Before using for the first time.....	7
Burns hazard	7
Correct use	7
General.....	5
Instructions for use.....	7
Note on use	7
Risk of injury.....	8
Risk to life	8
Saving energy.....	37
Selecting cooking zone	27
Selecting the cooking space temperature	11
Selecting the operating mode.....	11
Service & Support.....	43
Service agreement.....	43
Shelf guides	34
Removing	31
Spare parts	34
Ordering	43
Special accessories	11
Switching cooking zone off.....	27
Switching off the appliance.....	12
Switching on the appliance.....	11
Symbols.....	5

T

Technical data	34
Temperature sensor.....	10
Testing institutes	35
Time.....	23
Time display.....	24
Timer	13
Tips and tricks	36
Top/bottom heat	21
Top/bottom heat eco	21
Top/bottom heat humid.....	21
Type.....	2

U

Uneven browning	37
User settings.....	23
Using for the first time.....	9

V

Validity.....	2
V-ZUG App.....	22
V-ZUG-Home.....	22

W

Wire shelf.....	11, 34
WLAN connection	22

18 Service & Support



The «Trouble-shooting» section gives you valuable tips on how to deal with minor malfunctions yourself, saving you the time and trouble of calling out a service technician and any cost that goes along with it.

Whether you contact us about a malfunction or an order, please always state the serial number (SN) and appliance designation. You will also find these details on the certificate of guarantee, the original sales invoice and the identification plate of the appliance. You can also note them down here or on the service sticker which comes with the appliance:

SN: _____ **Appliance:** _____

Identification plate

- ▶ Open the appliance door.
 - The identification plate is located on the left-side panel.

Your repair order

If the appliance is not working properly, contact your nearest SIBIR Group AG service centre from a fixed line using freephone 0844 848 848 and stand in close proximity to the appliance.

Queries, orders, service agreement




For administrative and technical queries or problems, as well as for ordering spare parts and accessories, please contact our head office in Schlieren on telephone number 044 755 73 00.

As regards the maintenance of all products, when the guarantee expires you have the option of taking out a service subscription. We will be happy to send you the necessary forms.

Quick instructions

Please first read the safety precautions in the operating instructions!

– +

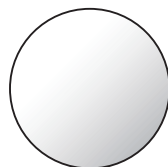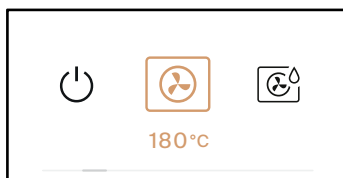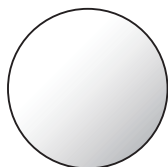

Selecting the operating mode

- ▶ Turn the  dial to the desired operating mode.
 - Having selected the operating mode, the appliance starts automatically 3 seconds later.

Operating modes



Hot air



Hot air humid



Hot air eco



PizzaPlus



Grill-forced convection



Grill



Bottom heat



Top/bottom heat eco



Top/bottom heat humid



Top/bottom heat

Selecting the cooking space temperature

- ▶ Turn the – + dial to the desired cooking space temperature.
 - The appliance accepts the change after 3 seconds.
 - The illumination is switched on.

As soon as an acoustic signal is emitted:

- the food can be placed in the cooking space.



For many uses, it is possible to start with a cold cooking space.

Switching off

- ▶ Touch the  function button or turn the  dial to the  position.

Function buttons

Various functions can be activated by touching the function buttons.



1241020-06

SIBIR Group Ltd

Bahnhofstrasse 134, 8957 Spreitenbach

Tel. 044 755 73 00

Service center: Tel. 0844 848 848