




Maintenance instructions

Tumble dryer

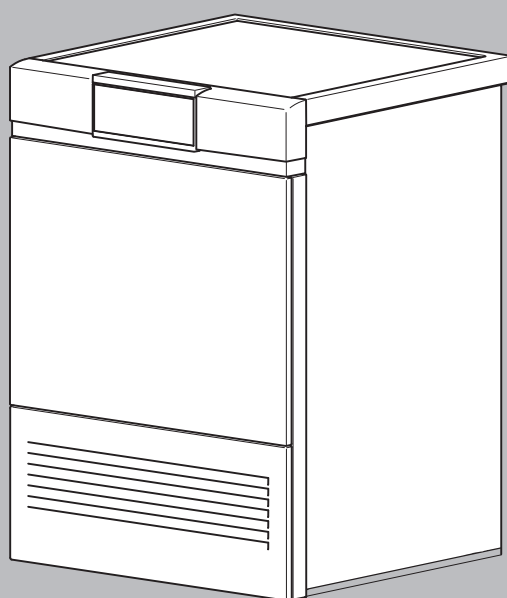

1 Important notice

- The appliance must not be modified or changed in any way.
- Use original V-ZUG spare parts and accessory parts only.
- Always disconnect the appliance from the electricity before carrying out any work on it (switch the appliance off, then remove the plug from the mains socket).
- Leak testing must be performed after every intervention on the appliance.
- Follow all the regulations, laws and standards that are applicable to this category of appliance in your country.

 **Unauthorized repairs could result in unforeseen dangers for the user, for which the manufacturer cannot accept liability.**
Installation and maintenance work or repairs must only be undertaken by a qualified and competent person.

Validity

Model designation	Type	Model number
AdoraDry V2000	AT2T	12011, 12017, 12029, 12031
AdoraDry V4000	AT4T	12012, 12018, 12032
CombiAdoraDry V4000	CAT4T	12014, 12030, 12034
AdoraDry V6000	AT6T	12013, 12019, 12033


V-ZUG

Industriestrasse 66



Type **AT6T-12013**

SN **12013 000001**

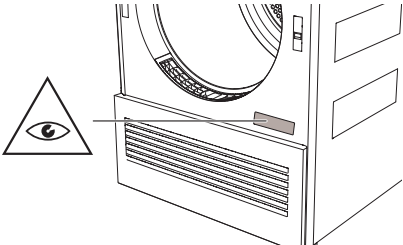

Please state the serial number (SN) when ordering parts.
Spare parts can be purchased from the spare parts shop at www.vzug.com.




Contents

1	Important notice	2
2	Front of the appliance	4
2.1	Unscrewing the front base panel	4
2.2	Removing the door hinge from the bottom.....	4
2.3	Removing the appliance door	4
3	Door seals	5
3.1	Seal for outer door cover	5
3.2	Inner/Outer door seal.....	5
4	Door lock AT2T 12011/12017/12029/12031	6
	Index	7


2 Front of the appliance

2.1 Unscrewing the front base panel

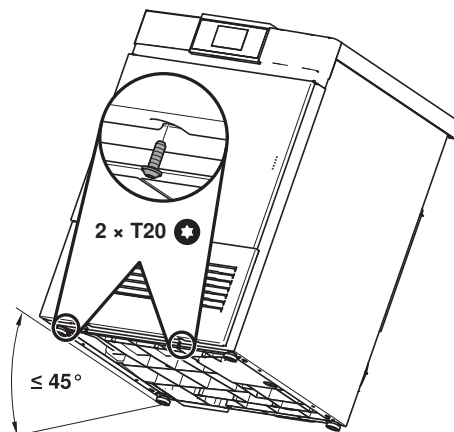


Unscrew the front base panel.
Remove the two screws at the bottom.

2.2 Removing the door hinge from the bottom

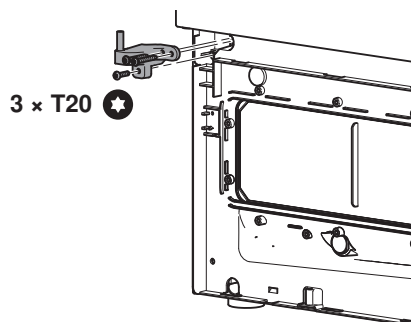

Remove the screws in the hinge.

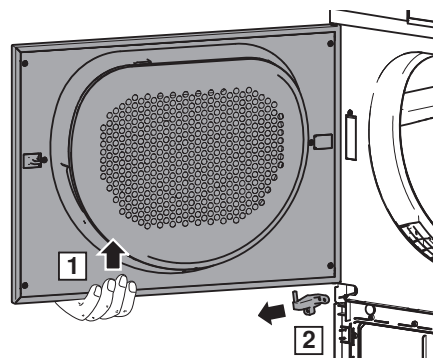


Open the appliance door at least 90°.
Lift the appliance door slightly and pull out the hinge downwards.



The appliance door can fall out of position.
Hold the appliance door firmly.

2.3 Removing the appliance door

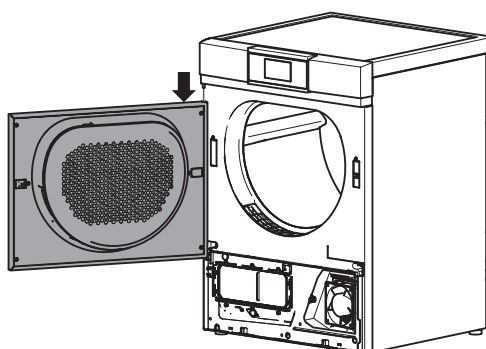


Remove the door hinge from the bottom. (See point 2.2 above.)
Move the appliance door down and off.

3 Door seals




The seals can be removed and refitted.


3.1 Seal for outer door cover

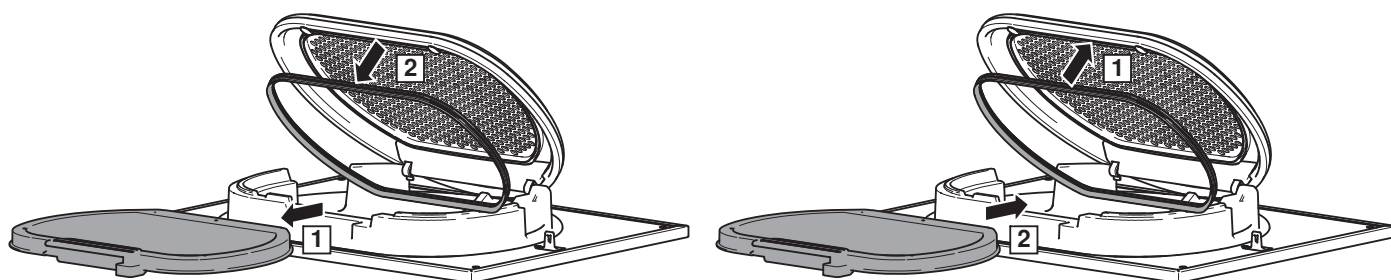

3.2 Inner/Outer door seal

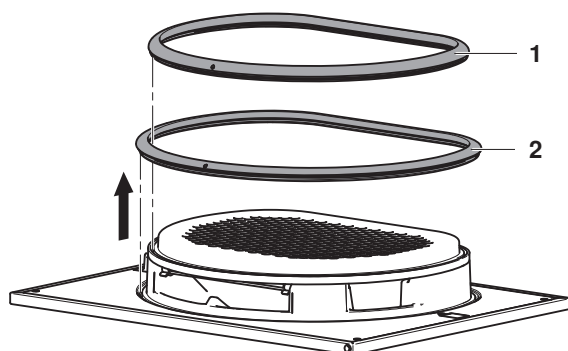

1 Inner door seal
2 Outer door seal


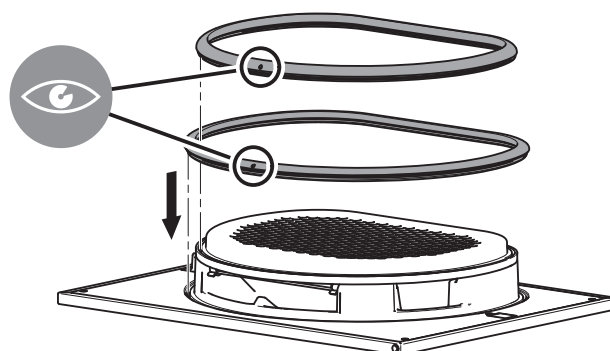


When fitting the seals make sure the hole sits at the lowest point.




Caution!

If «2 Outer door seal» is rippled and not fitted evenly, it can cause leaks and damage the adjacent kitchen cabinets.

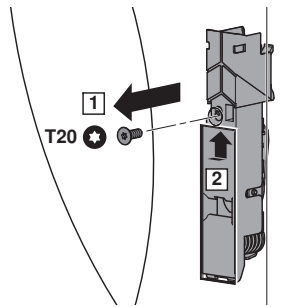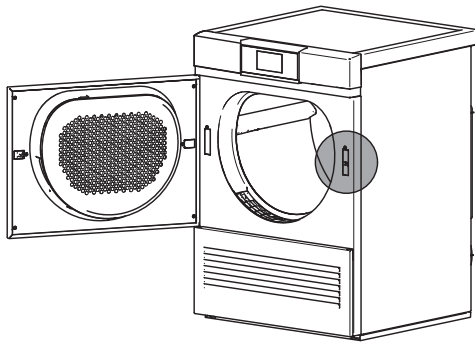4 Door lock AT2T 12011/12017/12029/12031

- 1** Remove screw.
2 Push up.

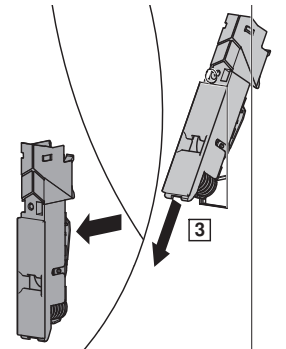

- 3** Release and
pull out downwards.



Index

D

Door lock AT2T..... 6

F

Front panel for base 4

I

Important notice..... 2

Inner door seal..... 5

O

Outer door seal..... 5

R

Removing the appliance door..... 4

Removing the door hinge from the bottom 4

S

Seal for outer door cover 5

CONTACT IN SWITZERLAND

V-ZUG Ltd
Industriestrasse 66
6302 Zug/Switzerland
www.vzug.com

Service & Support Switzerland
technischer-support@vzug.com

Service & Support International
service-support@vzug.com

